

Efficient Auto Dishwashing Guide

1. Preparation







- ✓ Check that all curtains and scrap trays are in place.
- ✓ Check that drains are CLOSED.
- ✓ Ensure scrap trays and jets are clean.
- ✓ Fill the dishwasher.
- ✓ Check temperatures:
 - Pre-wash 40-50°C
 - Wash 55-65°C
 - Rinse 82-90°C
- ✓ Check Dishwash Detergent and Rinse Aid product levels in the container. Replace if necessary.
- ✓ **ENSURE THAT DOSING EQUIPMENT IS SWITCHED ON.**

2. Loading




PRE-SCRAPING

- ✓ Remove food scraps from plates and dishes. 
- ✓ Pour tea and coffee residues down sink/drain.
- ✓ Change wash water.
- ✓ Correctly rack all plates according to size.
 -  ✓
 -  ✗
- ✓ Correctly rack cups over a sink or drainer.
 -  ✓
 -  ✗
- ✓ Correctly rack cutlery with handles facing downwards. Mix cutlery in each basket.
 -  ✓
 -  ✗
- ✓ Change water regularly.
- ✓ Always wash glassware in fresh water.

3. Close Down

- ✓ Switch off dishwasher. 
- ✓ Drain the wash tank. 
- ✓ Remove curtains, filter plates and scrap trays.
 - 
 - 
- ✓ Empty food debris into a suitable waste receptacle.
- ✓ Clean curtains, filter plates, scrap trays and jets thoroughly. 
- ✓ Rinse inside of machine with water. Pay attention to the reverse side of doors. 
- ✓ Replace curtains, filter plates and scrap trays.
- ✓ Allow to dry with doors open.

4. Changing Product Containers

- ✓ Wear the recommended protective clothing when changing containers.
 - 
 - 
 -  CORROSIVE
- ✓ Carefully withdraw tubing from empty container. DO NOT TOUCH END OF TUBE.
- ✓ Remove empty container and discard safely.
- ✓ Place new product container in position with cap still fitted.
- ✓ Break seal and remove the cap.
- ✓ Gently insert the dosing tube.